

CALIBRATION STEPS

All scales need to be calibrated every few months so that they can keep on reading accurately.

To begin calibrate, make sure the scale is on a flat firm surface.

1. Press MODE button on the back of the scale
2. It will shows the ISN (a number) then press MODE button again until the digits displayed on the scale turn into "CAL" and then "0".

Now the scale is in calibration mode.

4. Place an objects of known precise weight, at least 30 pounds in the central part of the scale.
5. When the display turn into CAL, it means the calibration is finished. Wait for auto off.

The digital scales will reset automatically after calibration is finished. You can now use the digital scale accurately in your next weigh-in.

Want to know more?


Skallo Corp.

www.SkalloNYC.com

P.O.BOX 656584

Fresh Meadows, NY

the scale instruction manual

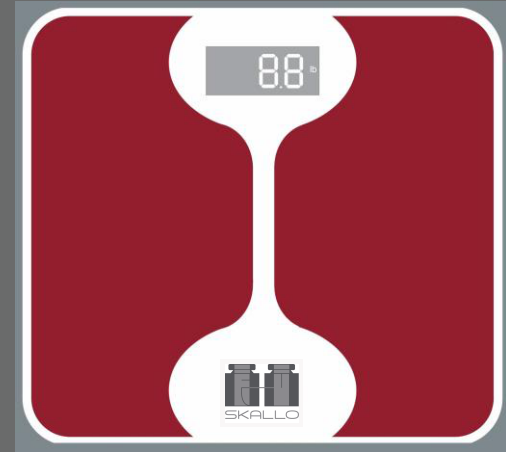

SKALLO
Digital Bathroom Scale